



DRUG PRECURSOR TESTING KITS


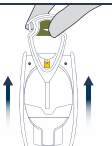

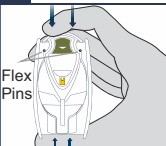
Procedure Card for IDT0260T

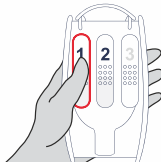

ACETIC ANHYDRIDE IDENTIFICATION

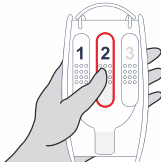

Substance Test



Read 
Before Use

As a precaution, gloves and eye protection should be worn when handling drug substances and using test units. Do not puncture any part of unit. Do not remove probe once a capsule is broken. In the unlikely event of a spill, rinse affected area thoroughly with water. Keep out of reach of children. All results are presumptive. If necessary, further testing by a competent drug testing lab can provide additional identification.

Test Preparation	1	Remove the Smart-Tip™ probe from test unit.	2	Sample suspected substance. Liquid	3	Lock Smart-Tip™ probe into test unit. Press firmly.	 Do not continue unless probe is locked below the Flex Pins and cannot be removed from the test unit.
		Place the absorbent paper of Smart-Tip™ probe into liquid. Make sure the paper is wet.					

Identification	4	With thumb and forefinger , squeeze chamber 1 until capsule breaks.	5	Gently shake test unit for 2-3 seconds.
				

Identification	6	With thumb and forefinger , squeeze chamber 2 until capsule breaks.	7	Gently shake test unit for 2-3 seconds.
				

Results		The appearance of a yellow color indicates the presence of Acetic Anhydride .
		If no yellow color develops, Acetic Anhydride is <u>not</u> present.

	Disposal	The test kit is safe to dispose of in the trash.
--	-----------------	--

0219