



TESTING KITS FOR DRUGS

Procedure Card for IDT5030

AMPHETAMINE/ MARIJUANA IDENTIFICATION


Substance Test



Read Before Use

As a precaution, gloves and eye protection should be worn when handling drug substances and using test units. Do not puncture any part of unit. Do not remove probe once a capsule is broken. In the unlikely event of a spill, rinse affected area thoroughly with water. Keep out of reach of children. All results are presumptive. If necessary, further testing by a competent drug testing lab can provide additional identification.

Test Preparation

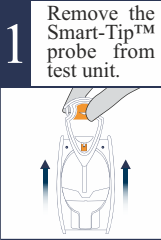

Testing Options

If the suspected substance is a powder or tablet, proceed to Steps 2-8.

If the suspected substance is plant material, proceed to Steps 9-14 on Side 2.

Amphetamine Test

Amphetamine Preparation

2 Sample suspected substance.

Powder	Tablet
Touch adhesive Smart-Tip™ to sample.	Firmly press Smart-Tip™ probe on the tablet while scrubbing in a circular motion until the tip is completely covered with substance.

Amphetamine Preparation

3 Lock Smart-Tip™ probe into test unit. Press firmly.

STOP
Do not continue unless probe is locked below the Flex Pins and cannot be removed from the test unit.

Amphetamine Identification

4 With thumb and forefinger, squeeze chamber 1 until capsule breaks.

5 Gently shake test unit for 2-3 seconds.

Amphetamine Results

- The appearance of a reddish-orange color within one minute indicates the presence of **Amphetamine** or **Methamphetamine**.
 - The appearance of a purple color within one minute indicates the presence of an opiate such as **Heroin**, **Morphine** or **Codeine**.
 - The appearance of a dark purple to black color indicates the presence of **Ecstasy/MDMA**, **MDA**, **MDE**, or **MBDB**.
- If none of the above colors develop, the above listed drugs are not present. Regardless of whether or not any color developed, **do not continue** to Marijuana testing. **STOP** and proceed to Dilution & Disposal.

Proceed to Dilution (steps 6-8), regardless of whether or not a color appeared.

Dilution

6 With thumb and forefinger, squeeze chamber 2 until capsule breaks.

7 With thumb and forefinger, squeeze chamber 3 until capsule breaks.

8 Gently shake test unit for 2-3 seconds.

The test window will warm up. This is normal.

Disposal After Dilution, the test kit is safe to dispose of in the trash.



Manufactured by IDenta Ltd
www.identa-corp.com
Patented Technology • Made in Israel



TESTING KITS FOR DRUGS

Procedure Card for IDT5030

AMPHETAMINE/ MARIJUANA IDENTIFICATION

Substance Test

SIDE 2

Marijuana Test

9 Sample suspected substance.

Plant Matter	Hashish
Touch Smart-Tip™ probe to sample. Make sure the tip is completely covered.	Firmly press Smart-Tip™ probe on the substance while scrubbing in a circular motion until the tip is completely covered with substance.

10 Lock Smart-Tip™ probe into test unit. Press firmly.

STOP
Do not continue unless probe is locked below the Flex Pins and cannot be removed from the test unit.

11 With thumb and forefinger, squeeze chamber 2 until capsule breaks.

DO NOT BREAK CHAMBER 1

12 Gently shake test unit for 1 minute.

13 With thumb and forefinger, squeeze chamber 3 until capsule breaks.

14 Gently shake test unit for 10 seconds.

Wait up to 3 minutes for color to fully develop. The color may develop sooner.

The appearance of a blue-violet or purple color indicates the presence of **Marijuana/Hashish**.

If no blue-violet or purple color develops, Marijuana/Hashish is not present. Regardless of whether or not any color developed, **do not continue** to Amphetamine testing. **STOP** and proceed to Disposal.

Disposal The test kit is safe to dispose of in the trash.



Manufactured by IDenta Ltd
www.identa-corp.com
Patented Technology • Made in Israel